

WIRELESS NETWORK BRIDGE

Fire Wall Requirements

Your network may need to be configured to allow network traffic to Impact's. The following address' need to be allowed on your network.

Cloud Address: access.impactledsigns.com

Cloud Address: impact.cloudled.com

Weather Server: weather.cloudled.com

HTTPS: 443/TCP

WEBSOCKET: 8443/TCP

NTP: 123/UDP

External network traffic will need to be granted through all firewalls and network filtering systems.

Wifi Kit Installation


The Sign Side WiFi Unit:

At the sign, plug the WiFi unit into the **DATA-IN PORT** of the **PRIMARY SIDE**. You should have a Power Light and blinking LAN light. Secure the radio to the provided mount.

The Building Side WiFi Unit:

Mount the WiFi Unit on the exterior of the building, in line-of-sight of the sign WiFi unit. Run the ethernet cable from the unit to the black POE PORT of the POE injector provided in the box. Run an ethernet from the LAN port of the POE injector to a **Router/Switch**.

Do not plug the ethernet into a PC's ethernet port.

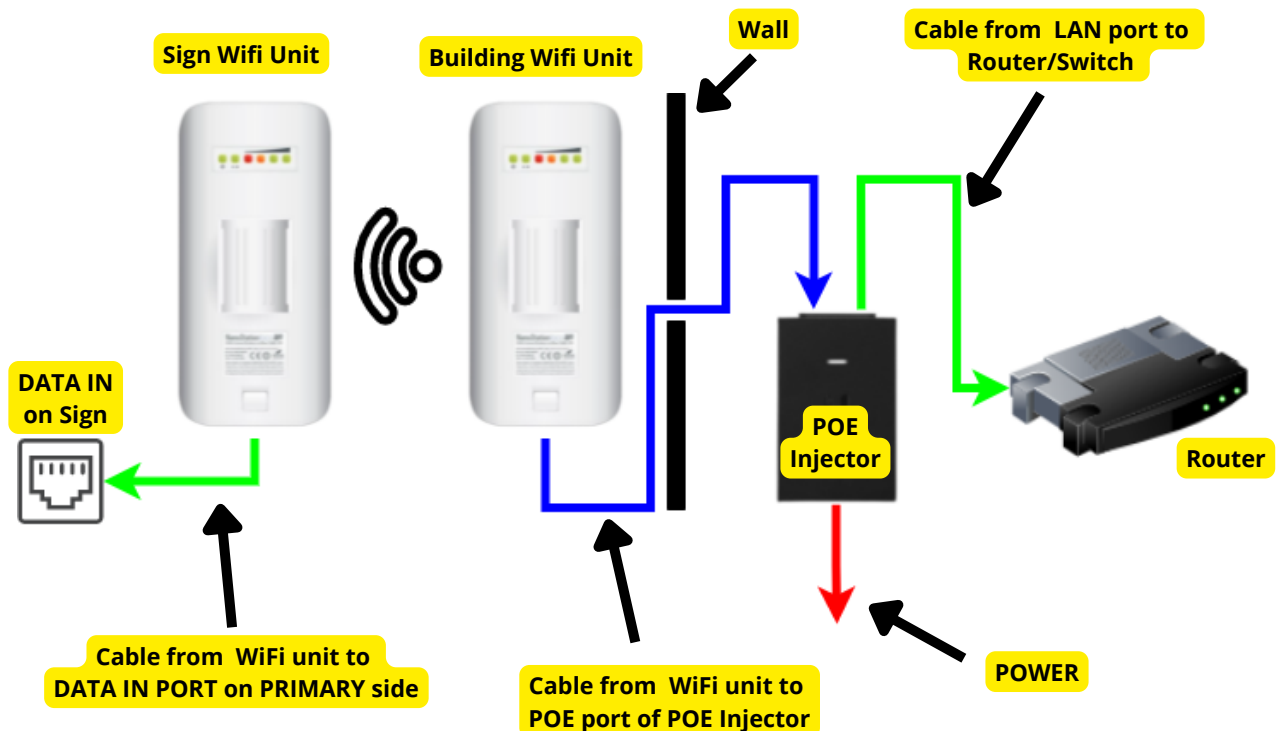

1

For I.T.

2

For Installer